


ASSEMBLY AND INSTALLATION INSTRUCTIONS

H0219

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.


Hardware Package (included):

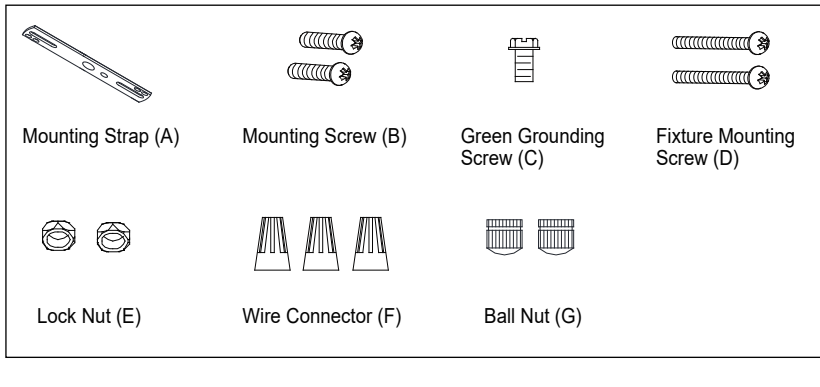


Installation Steps

Turn off the power at fuse or circuit box

- Attach the mounting strap to the outlet box by using two mounting screws.
- Thread the fixture wire through the canopy kit, and then secure the rod assembly to the set nipple of the canopy kit.
- Rod Connections:
 - Thread the fixture wire from the fixture through the lower rod, and then secure the lower rod onto fixture using the threaded pipe.
 - Thread the fixture wire through the middle rod, and then secure the middle rod onto the lower rod using the threaded pipe.
 - Thread the fixture wire through the upper rod, and then secure the upper rod onto the middle rod using the threaded pipe.
Note: Length adjustable from 20-1/4" to 74-1/4". Use fewer rods if shorter length is desired.
 - Thread the fixture wire through the fixture canopy kit and then secure the fixture canopy kit onto the upper rod using the threaded pipe.
- Pull out the source wires from the outlet box. Make wire connections as follows:
 - Connect the smooth-coated wire (marked) from the fixture to the black wire from the power source.
 - Connect the ribbed-coated wire (unmarked) from the fixture to the white wire from the power source.
 - Attach the fixture grounding wire to the mounting strap with the green grounding screw, and then connect it to the house grounding wire with a wire connector. Carefully put the wires back into the outlet box.
- Attach the canopy kit to the mounting strap by inserting the fixture mounting screws, and then secure it with two ball nuts.

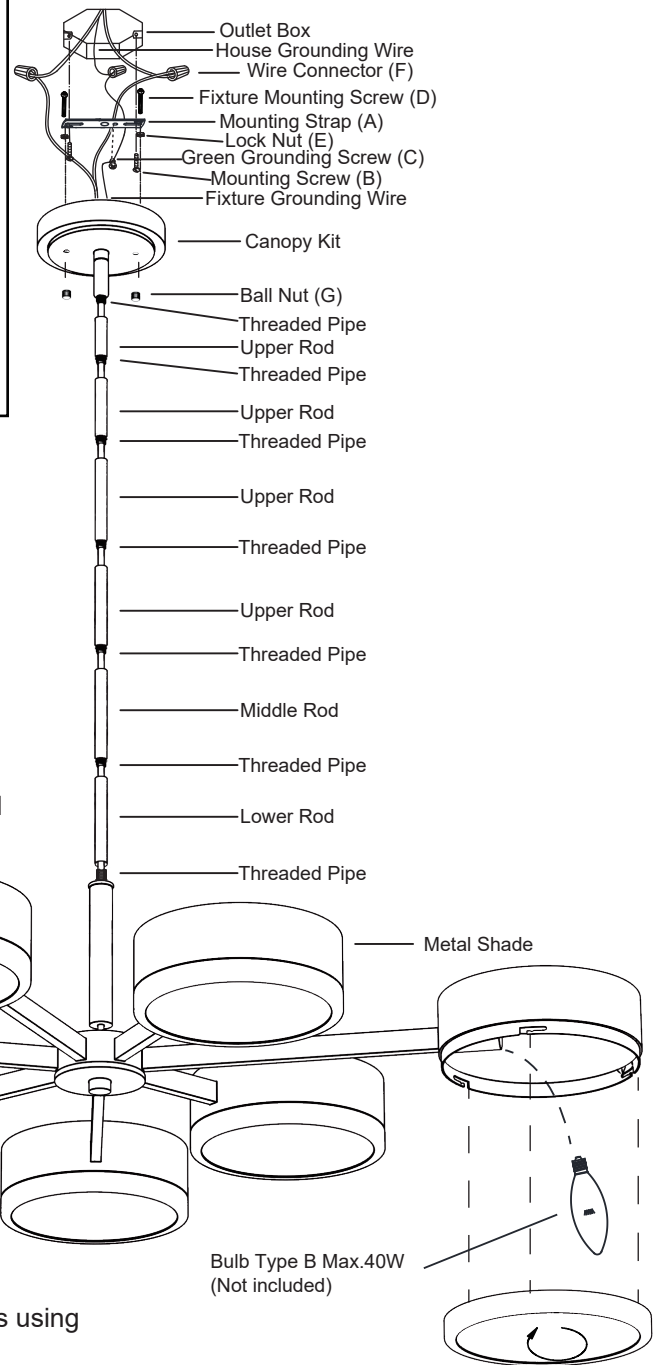

6. Install bulbs (not included). Check relamping label at socket area or packaging for maximum allowed wattage.
7. Attach the glass shades onto the metal shade, then turn right to fix the glass shades.
8. Angled mounting recommended for a vaulted or angled ceiling. (See Fig. 1)

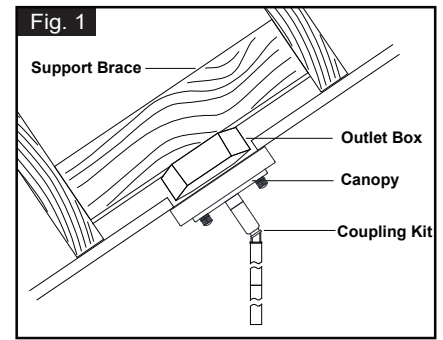


Turn on the power at fuse or circuit box

The following parts are available for re-order if damaged or missing.


Spare Parts List:

							6018 MM (1SET)
Mounting Strap (A)	Mounting Screw (B)	Green Grounding Screw (C)	Fixture Mounting Screw (D)	Lock Nut (E)	Wire Connector (F)	Ball Nut (G)	

ROD Φ11.7*12"(4) 3172RD	ROD Φ11.7*6"(1) 3173RD	ROD Φ11.7*3"(1) 3174RD	Glass Shade 10046FR

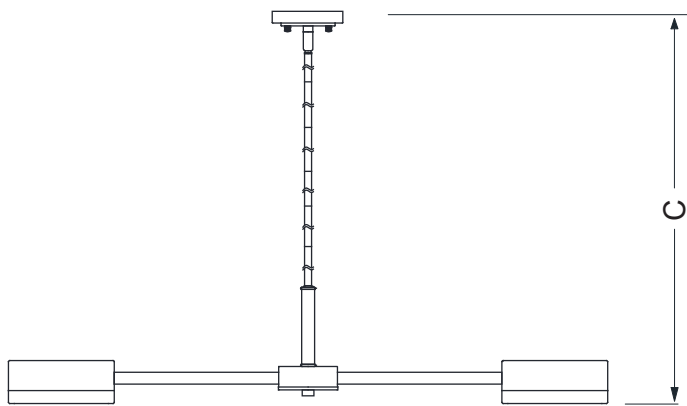

A: 35-1/2"

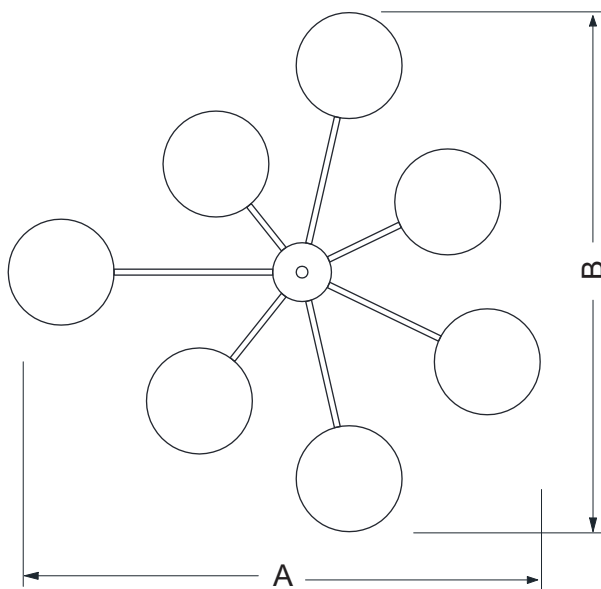

B: 34-3/4"

C: 20-1/4"~74-1/4"