

ASSEMBLY AND INSTALLATION INSTRUCTIONS

PD5024


WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

Installation Steps

1. Insert 2 screws to the mounting strap, and secure with the lock nuts.
2. Attach the mounting strap to ceiling box by using 2 mounting screws.
3. Tube connections:
 - a. Thread the fixture wire from the socket through the down tube (w/o nipple), and then secure down tube with the nipple into the cap.
 - b. Thread the fixture wire from the assembled tube through the middle tube (w/ nipple) and secure the middle tube with the nipple.
 - c. Thread the fixture wire through the upper tube (w/ nipple), and then secure the upper tube with the nipple.

*The height can be adjustable to 16-3/8", 26" or 35-5/8" by using the tubes.
4. Thread the fixture wire through the canopy, and attach the upper tube to the canopy with the set-nipple.
5. Make wire connections with wire nuts:
 - The black wire from fixture to the black wire from power source.
 - The white wire from fixture to the white wire from power source.
 - Attach the grounding wire and house grounding wire to the mounting strap with a green grounding screw. Carefully tuck wires back into the ceiling box.
6. Attach the canopy to the mounting strap by inserting the screws, and secure with the 2 bolt nuts.
7. Attach the glass shade to the cap, and secure with the socket ring.
8. Install a bulb. (Please do not exceed the maximum capacity, which is recommended on the socket)
9. Turn on the power at fuse or circuit box.

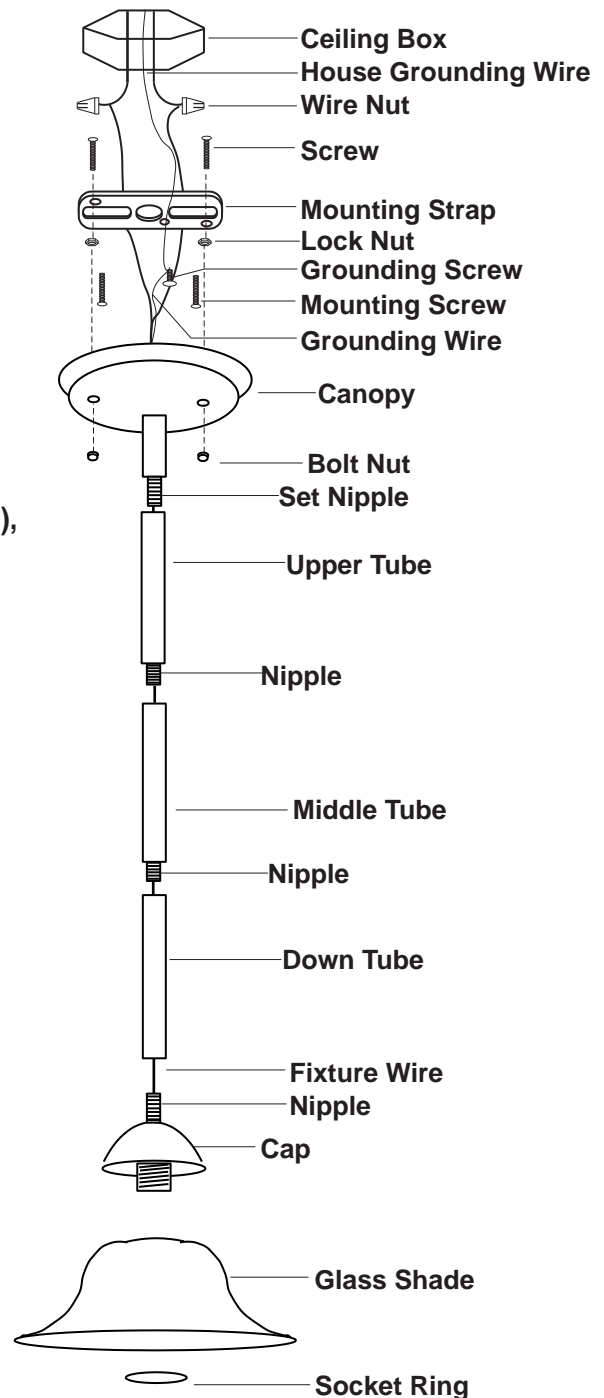

VAXCEL
LIGHTING